
Ericson Temporary Power and Lighting Layout Support

Critical to any safe Jobsite is the right amount of power and lighting in the right locations, for a safe and productive worksite.

Ericson offers lighting layout services that meet the OSHA required lumen output levels for various areas found on jobsites, to ensure productive installation and safe egress light levels.

Based on your specific application and space requirements, our Product Applications Team will design a lighting and power system to meet code requirements for the tasks performed. The design process may include installation and power recommendations to reduce costs by maximizing circuit capacity and stringer lengths.

Reach out to your Ericson Representative or contact us at <u>www.ericson.com</u> to start the consultation process.

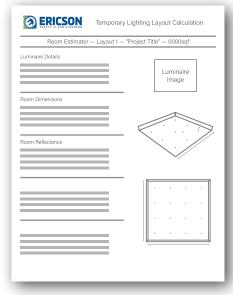

Representation only.

Lighting and Power Layout Example

