


Ericson Pendant Station Button and Operator Guide



Part Number	Switch & Accessory Action	Contact Configuration / Design	Speed	# of wires	# of buttons
55S01	Switch - Maintained On/Off Two Button Interlocked	1 NO ON / OFF	1	1	2
55S02		1 NC + 1 NO ON / OFF	1	1	2
55S03	Switch - Momentary Two Button Non-Interlocked	1 NO / 1 NC	1	2	2
55S04		1 NO / 1 NO	1	2	2
55S05		1 NC + 1 NO / 1 NC + 1 NO	1	2	2
55S06	Switch - Dual Pole Momentary Two Button w/ Mechanical Interlock	2 NO / 2 NO	1	4	2
55S07		2 NC + 2 NO / 2 NC + 2 NO	1	4	2
55S08	Switch - Momentary 1-Speed, Two Button w/ Mechanical Interlock	1 NO / 1 NO	1	2	2
55S09		1 NC + NO / 1 NC + NO	1	2	2
55S10	Switch - Momentary Single Button	1 NC	1	1	1
55S11		1 NO	1	1	1
55S12		1 NC + 1 NO	1	2	1
55S13		2 NC	1	2	1
55S14		2 NO	1	2	1
55S15	Switch - Momentary 2-Speed, Two Button w/ Mechanical Interlock	2 NO 2 SPD / 2NO	2	3	2
55S16		2 NO + 2 NC 2 SPD / 2 NO + 2 NC	2	3	2
55S17	Switch - Momentary 3-Speed, Two Button w/ Mechanical & Electrical Interlock	1NC + 3 NO 3 SPD / 1NC + 3 NO	3	4	2
55S18	Selector Switch - Maintained 2 Position	1NC 2 POS	N/A	1	1
55S19		1NO 2 POS	N/A	1	1
55S20		1 NO + 1 NC 2 POS	N/A	2	1
55S21		2 NO 2 POS	N/A	2	1
55S22		2 NC 3 POS CENTER OFF	N/A	2	1
55S23		2 NO 3 POS CENTER OFF	N/A	2	1
55S24		2 NC 2 POS	N/A	2	1
55S25		1 NO + 1 NC 3 POS CENTER OFF	N/A	2	1
55S26	E-STOP - Emergency Stop	1 NC	N/A	1	1
55S27		1 NO	N/A	1	1
55S28		1 NO + 1 NC	N/A	2	1
55S29		2 NC	N/A	2	1
55S30		2 NO	N/A	2	1
55S31	Variable Position Resistor	RESISTOR 1K OHMS	N/A	2	1
55S32		RESISTOR 2K OHMS	N/A	2	1
55S33	Blank Plate - Single button hole	Cover plate of an unused button hole	N/A	N/A	1
5600-HS	Horn - 19mm diameter for use with Large Accessory Hole in 6,8,10,12 button enclosures	6A 125V / 3A 250V AC HORN	N/A	1	1
55LD1D	Red Pilot Light - Small Hole - 12mm diameter for use with Small Accessory Hole.	12V AC	N/A	1	0

Please see products.ericson.com for all wiring diagrams of pendant station buttons.

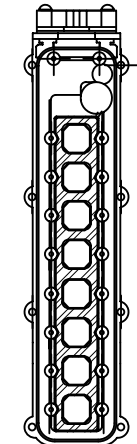

Part Number	Switch & Accessory Action	Contact Configuration / Design	Speed	# of wires	# of buttons
55LN1A	Red Pilot Light - Large Hole - 19mm diameter for use with Large Accessory Hole in 6,8,10,12 button enclosures	110V AC	N/A	1	0
55LN1D		12V DC	N/A	1	0
55LN2D		24V AC/DC	N/A	1	0
55PL1A	Red Pilot Light - Button Hole - 22mm diameter for use within 1 button space	110V AC	N/A	2	1
55PL1D		12V DC	N/A	2	1
55PL2D		24V AC/DC	N/A	2	1
55BLACK	Button Cover	Black Boot	N/A	N/A	1
55GREEN		Green Boot	N/A	N/A	1
55RED		Red Boot	N/A	N/A	1
55LC	Button Label Cover	Clear Button Label Cover	N/A	N/A	1
55CG1	Enclosure Bushing - Small Inlet	Cable Range .30 - .41"	N/A	N/A	N/A
55CG2		Cable Range .41 - .53"	N/A	N/A	N/A
55CG3		Cable Range .52 - .65"	N/A	N/A	N/A
55CG4		Cable Range .64 - .77"	N/A	N/A	N/A
55CG5	Enclosure Bushing - Large Inlet	Cable Range .76 - .89"	N/A	N/A	N/A
55CG6		Cable Range .88 - 1.0"	N/A	N/A	N/A
55CG7		Cable Range 1.0 - 1.12"	N/A	N/A	N/A
55CG8			N/A	N/A	N/A
55EN02	Pendant Enclosure	2 Button Holes	N/A	N/A	2
55EN04		4 Button Holes	N/A	N/A	4
55EN06		6 Button Holes	N/A	N/A	6
55EN06D		6 Button Holes - Deep Back	N/A	N/A	6
55EN06H		6 Button Holes - Large Bushing Hole	N/A	N/A	6
55EN06HD		6 Button Holes - Large Bushing Hole & Deep Back	N/A	N/A	6
55EN08		8 Button Holes	N/A	N/A	8
55EN08D		8 Button Holes - Deep Back	N/A	N/A	8
55EN08H		8 Button Holes - Large Bushing Hole	N/A	N/A	8
55EN08HD		8 Button Holes - Large Bushing Hole & Deep Back	N/A	N/A	8
55EN10		10 Button Holes	N/A	N/A	10
55EN10H		10 Button Holes - Large Bushing Hole	N/A	N/A	10
55EN10HD		10 Button Holes - Large Bushing Hole & Deep Back	N/A	N/A	10
55EN12H		12 Button Holes - Large Bushing Hole	N/A	N/A	12
55EN12HD	12 Button Holes - Large Bushing Hole & Deep Back	N/A	N/A	12	
55J1	Jumper	Jumper for Switch 55S08 & 55S09. Points 1 to 5	N/A	N/A	N/A
55J2		Jumper to Connect Commons for 1,2,3 Speed and On/Off Switches	N/A	N/A	N/A
55J3		Jumper to Connect 2 Speed Switches. Point 6 to 4 and 14 to 16	N/A	N/A	N/A
55J4		Jumper to Connect 3 Speed Switches. Point 18 of two adjacent.	N/A	N/A	N/A
55J5		Jumper to Connect Common for 2 Speed Switches. Point 5 to 15	N/A	N/A	N/A
LS1	Labels	Label Legend Sheet for Push Buttons (qty 28)	N/A	N/A	N/A
LS2		Label Legend Sheet for Selector Switches (qty 22)	N/A	N/A	N/A
LS3		Label Legend Sheet for Enclosure (qty 24)	N/A	N/A	N/A